



# Aufbauanleitung 309832/LH

Assembly instructions / Instructions de montage / Montagehandleiding

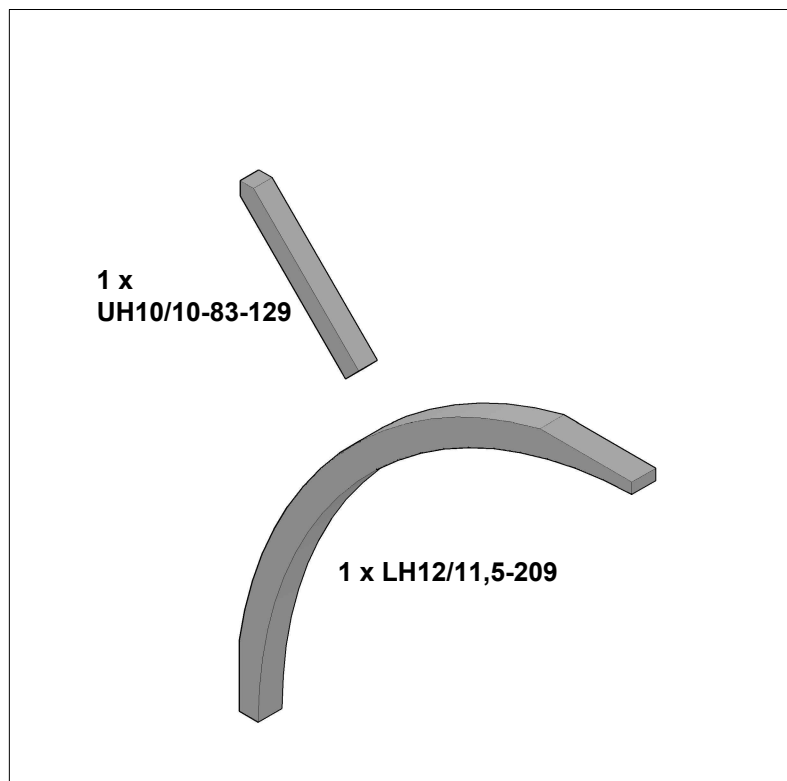


- |              |  |            |
|--------------|--|------------|
| 2 x C110-020 |  | 200mm, M10 |
| 1 x C110-022 |  | 220mm, M10 |
| 1 x C110-024 |  | 240mm, M10 |
| 4 x A110-39  |  | M10        |
| 4 x C110-M10 |  | M10        |
| 2 x C105-212 |  | 212cm      |
| 2 x C105-132 |  | 132cm      |

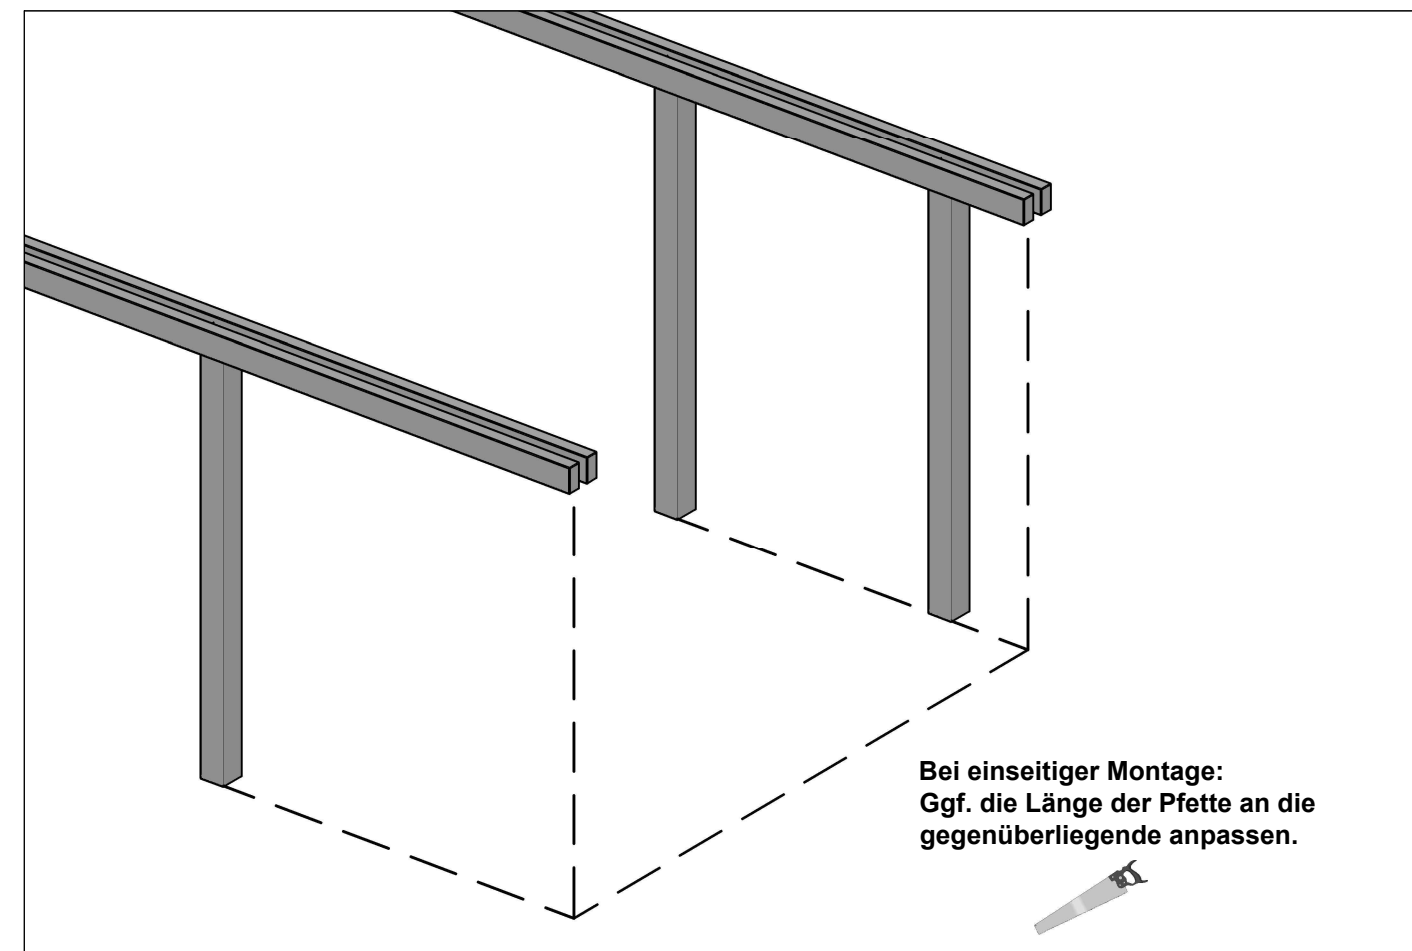

# Aufbauanleitung 309832/LH

Assembly instructions / Instructions de montage / Montagehandleiding

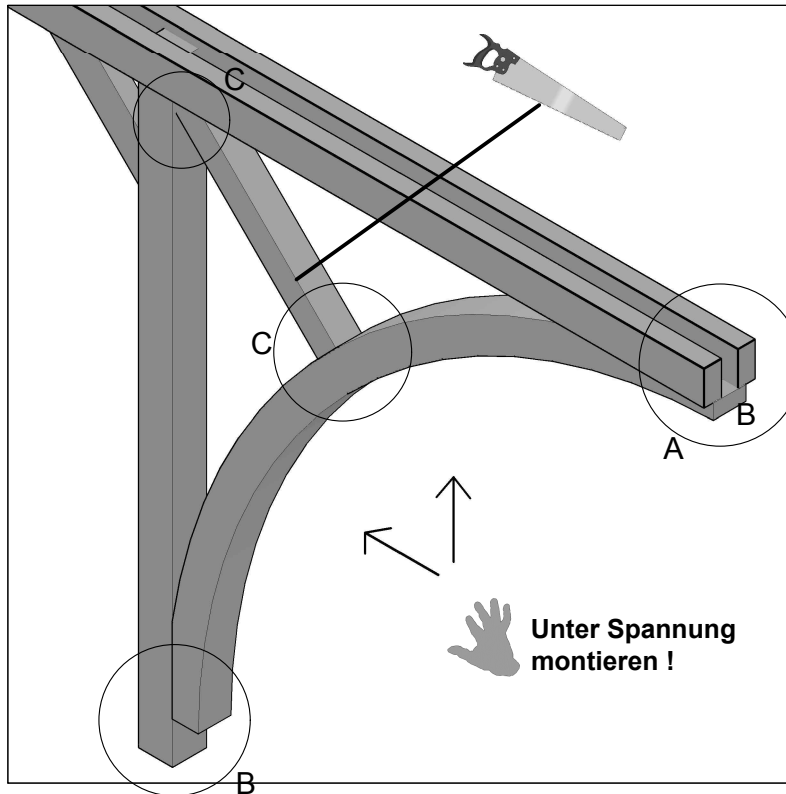

<p><b>A</b></p>	<p><b>2x C110-020, 200mm</b> </p> <p><b>2x A110-39</b> </p> <p><b>2x C110-M10</b> </p>	<p><b>9mm</b></p>
-----------------	--	-------------------

<p><b>B</b></p>	<p><b>für 12er Pfosten:</b></p> <p><b>1 x C110-024, 240mm</b> </p> <p><b>1 x C110-022, 220mm</b> </p> <p><b>2 x A110-39</b> </p> <p><b>2 x C110-M10</b> </p>	<p><b>10mm</b></p>
-----------------	--	--------------------

<p><b>C</b></p>	<p><b>2 x C105-132, 132mm</b> </p> <p><b>8mm</b></p>		<p><b>2 x C105-212, 212mm</b> </p> <p><b>8mm</b></p>
-----------------	--	--	--